



SWIVEL TASK

Rest Position Adjustment

Loosen hand wheel (do not remove), and slide back to desired position, then re-tighten hand wheel.

Pneumatic Height Adjustment

To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.

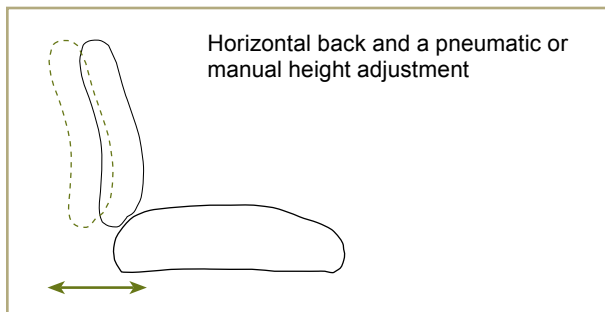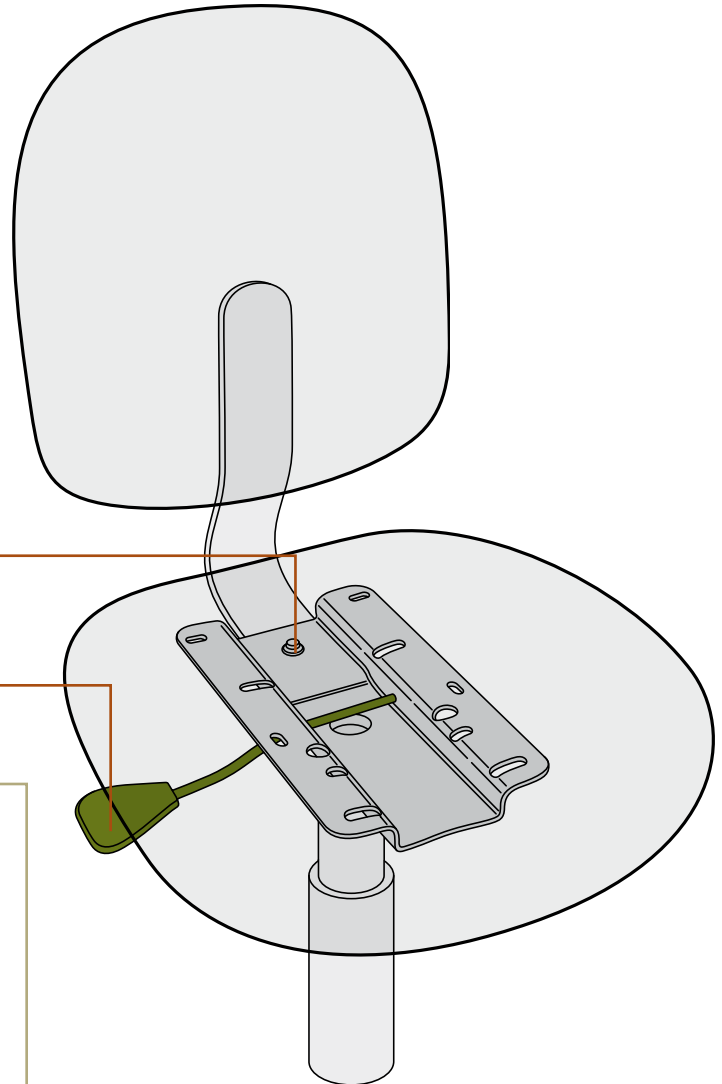

Horizontal back and a pneumatic or manual height adjustment