

DELUXE FORWARD PIVOT SYNCRO

Ratchet Back Height Adjustment

Simply lift back to desired position and back locks automatically. To release and reset back position, lift back completely to top stop and return to bottom stop and then move up to the new position.

Infinite Position Tilt Lock

To lock chair in position, push paddle down, to allow free rocking movement, pull paddle up.

Seat Slider

While seated, pull lever, push seat to desired depth and release lever to lock. Locks in 7 positions over 2 ½ inches.

Pneumatic Height Adjustment

To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.

Forward Tilt

Lean back in chair and roll or pull lever forward for forward tilt, push or roll lever backward for straight position during rocking. Attention: lever can only be moved when in a rear rocking position.

Tension Knob

Turn clockwise to increase tension, turn counter-clockwise to decrease tension.

