

ADJUST SEAT (CONT'D)**22305 – 05 Multi-function Control with seat slider****Back Angle Adjustment**

While seated, pull paddle up and when desired angle is found, push paddle down to lock. The back will free float when the paddle is in the up position.

Pneumatic Height Adjustment

To lower, lift paddle while seated. To raise, lift paddle with your weight off of the seat.

Infinite Seat Angle Adjustment with 6 Degree Forward Tilt

To change seat angle, pull paddle up while seated. Push paddle down to lock when desired angle is achieved. Seat can rock.

Forward Tilt



Lean back in chair and spin lever forward for forward tilt. Roll lever backward for flat position during rocking. Attention: Adjust only when in free rocking movement.

Tension Knob

Turn clockwise to increase tension, turn counter-clockwise to decrease tension.

Adjust Seat Slider

While seated, place one foot on base to keep chair from moving and pull up on paddle. Slide seat forward or backward and release handle to lock in place. This locks in 7 positions over 2 ½ inches.

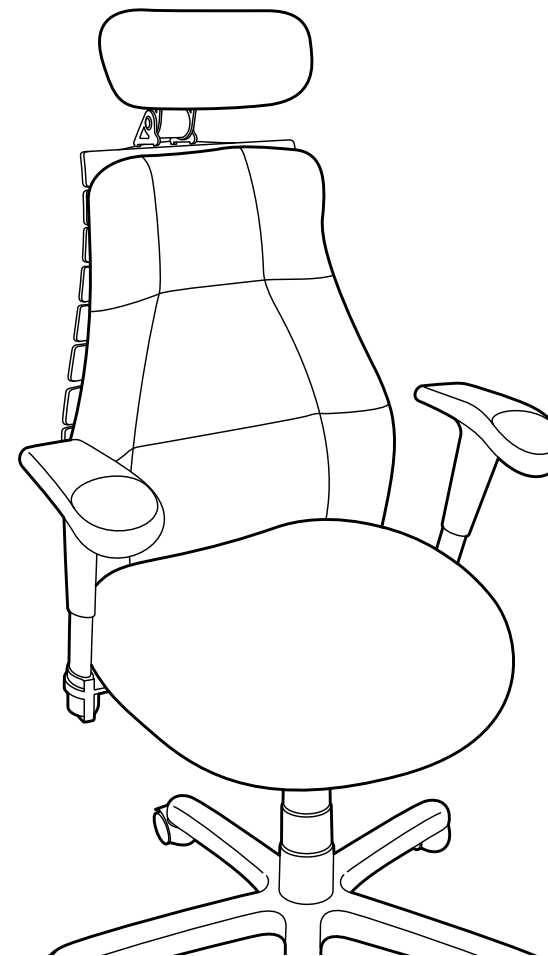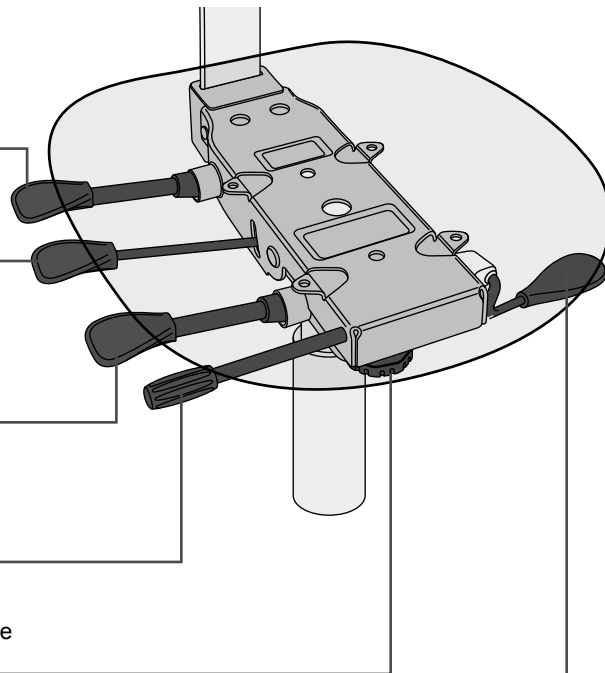
**ADJUST BACK****Back posture lock paddle for all Verte models**

The Verte is built on 11 torsion spring-loaded bearing joints that take an exact spine impression which can be locked in place at the touch of a lever. Push paddle down, and lean back into the chair to find your ideal posture. Pull paddle up to lock in the posture fit that you desire from your Verte chair.

ADJUST ARM (23A, 24A)


Adjust Arm Vertically:

While seated, lift button and hold. Raise or lower the arm to desired height and release the button.

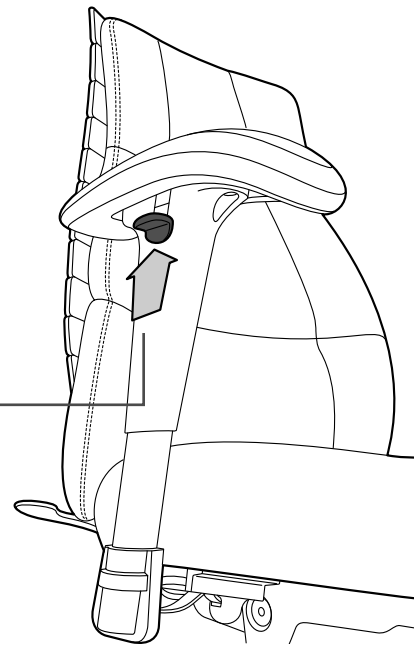

Adjust Arm Horizontally:

Reach on the bottom of the arm under the seat until you feel a plastic knob. Twist the knob to the left to loosen the arm. When you find a comfortable arm position for you, twist the knob to the right to lock into place.

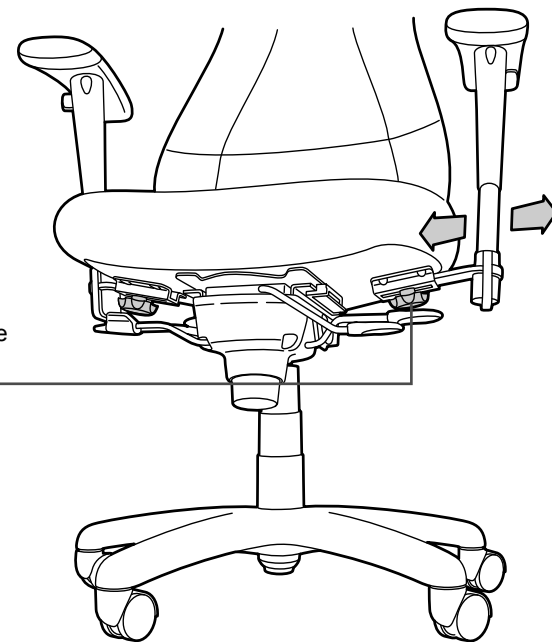

ADJUST SEAT

22011/22111 – 11 Syncro Control

Adjust Seat Slider

While seated, place one foot on base to keep chair from moving and pull up on paddle. Slide seat forward or backward and release handle to lock in place. This locks in 7 positions over 2 ½ inches.

Adjust Infinite Position Tilt Lock

To lock chair in position, push paddle down. To allow free rocking movement, pull paddle up.

Pneumatic Height Adjustment

To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.

Forward Tilt

Lean back in chair and spin lever forward for forward tilt. Roll lever backward for flat position during rocking. Attention: Adjust only when in free rocking movement.

Adjust Tension Knob

Turn clockwise to increase tension, turn counter-clockwise to decrease tension.

