

## CONTROL OPTION INSTRUCTIONS

### 04/05 MULTI-FUNCTION ERGO CONTROL WITH SEAT SLIDER

#### 05 Ratchet Back Height Adjustment

Simply lift back to desired position and back locks automatically. To release and reset back position, lift back completely to top stop and return to bottom stop, and adjust to the new position.

#### 04 Back Height Adjustment

Turn knob counter-clockwise to loosen. Lift or lower chair back to desired position and turn clockwise to tighten.

#### Back Angle Adjustment

While seated, lift paddle up; when desired angle is found, push paddle down to lock. Back will free float in the paddle up position.

#### Pneumatic Height Adjustment

To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.

#### Infinite Seat Angle Adjustment with 4 degree Forward Tilt

To change seat angle, lift paddle up while seated. Push paddle down to lock when desired angle is achieved. Seat can rock in paddle up position.

#### Forward Tilt

Lean back in chair and roll or spin lever forward for forward tilt. Roll or spin lever backward for flat position during rocking. Attention: Lever can only be moved when in a rear rocking position.

#### Tension Knob

Turn clockwise to increase tension, turn counter-clockwise to decrease tension.

#### Seat Slider

While seated, lift lever, adjust seat to desired depth and release lever to lock. Locks in 5 positions over 2 inches.

#### Options 60 Air Lumbar (Optional)

 
The air lumbar feature of your new RFM chair conforms to the natural curve of your back. The push button design allows easy inflation/deflation to meet your comfort level.

#### To Inflate

To inflate the backrest, press the top black rubber bulb on the back of your chair.

#### To Deflate

To decrease the firmness, press the small black button.

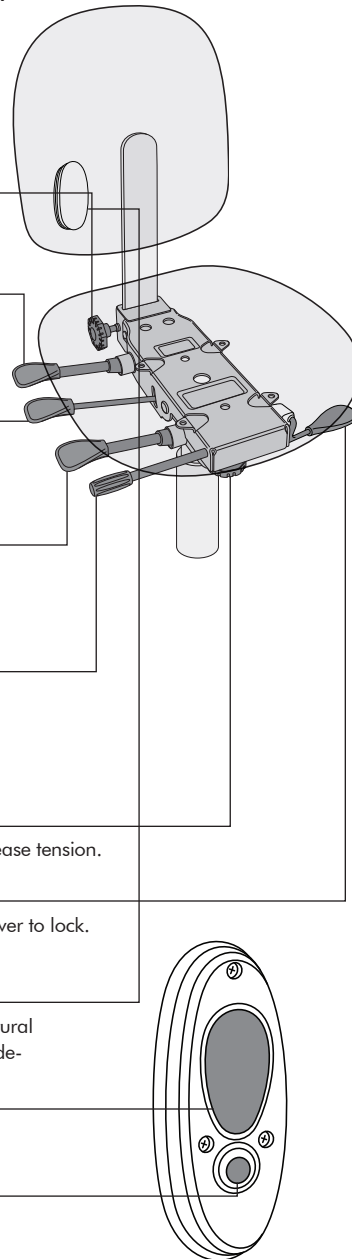

### 11 CONTROL DELUXE FORWARD PIVOT SYNCRO

#### Ratchet Back Height Adjustment

Simply lift back to desired position and back locks automatically. To release and reset back position, lift back completely to top stop and return to bottom stop, and adjust to the new position.

#### Infinite Position Tilt Lock

To lock chair in position, push paddle down. To allow free rocking movement, lift paddle up.

#### Seat Slider

While seated, lift lever; adjust seat to desired depth and release lever to lock. Locks in 8 positions over 2 3/4 inches.

#### Pneumatic Height Adjustment

To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.

#### Forward Tilt

Lean back in chair and roll or spin lever forward for forward tilt. Roll or spin lever backward for flat position during rocking. Attention: Lever can only be moved when in a rear rocking position.

#### Tension Knob

Turn clockwise to increase tension, turn counter-clockwise to decrease tension.

### 14 CONTROL FORWARD PIVOT SYNCRO

#### Ratchet Back Height Adjustment

Simply lift back to desired position and back locks automatically. To release and reset back position, lift back completely to top stop and return to bottom stop, and adjust to the new position.

#### Infinite Position Tilt Lock

To lock chair in position, push paddle down. To allow free rocking movement, lift paddle up.

#### Seat Slider

While seated, lift lever; adjust seat to desired depth and release lever to lock. Locks in 7 positions over 2 1/2 inches.

#### Tension Knob

Turn clockwise to increase tension, turn counter-clockwise to decrease tension.

#### Pneumatic Height Adjustment

To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.

