

VERTE ADJUSTMENT INSTRUCTIONS



ADJUST BACK

 
 
Back posture lock paddle for all Verte models

The Verte is built on 11 torsion spring-loaded bearing joints that are designed to take an exact spine impression. This impression can be locked in place at the touch of a lever. Push paddle down and lean back into the chair to find your ideal posture. Lift paddle up to lock in the impression that best fits your body.

ADJUST ARM (23A, 24A)

Adjust Arm Vertically:

While seated, lift button and hold. Raise or lower the arm to desired height and release the button.

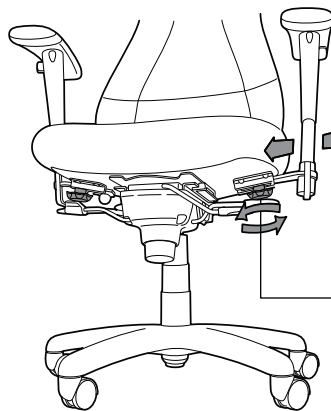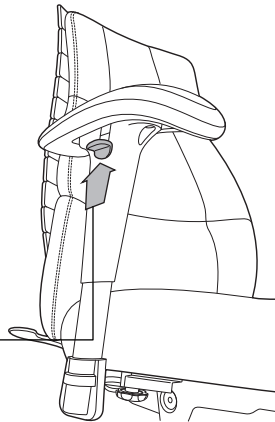

Adjust Arm Horizontally:

Reach on the bottom of the arm under the seat until you feel a plastic knob. Turn the knob to the left to loosen the arm. When you find a comfortable arm position for you, turn the knob clockwise to tighten into place and turn it counter-clockwise to loosen.

14 CONTROL FORWARD PIVOT SYNCRO

Synchro Tilt Lock

Turn the knob clockwise to lock backrest in position. To unlock, turn the knob counter-clockwise and lean back on the chair to release the anti-kickback mechanism.

Seat Slider

 
While seated, lift lever; adjust seat to desired depth and release lever to lock. Locks in 7 positions over 2½ inches.

Tension Knob

Turn clockwise to increase tension, turn counter-clockwise to decrease tension.

Pneumatic Height Adjustment

To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.

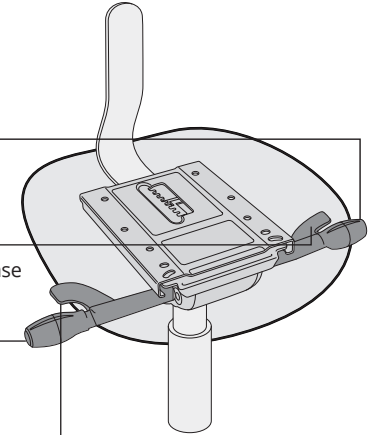

05 MULTI-FUNCTION ERGO CONTROL WITH SEAT SLIDER

Back Angle Adjustment

While seated, lift paddle up; when desired angle is found push paddle down to lock. Back will free float in the paddle up position.

Pneumatic Height Adjustment

To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.

Infinite Seat Angle Adjustment with 4 degree Forward Tilt

To change seat angle, lift paddle up while seated. Push paddle down to lock when desired angle is achieved. Seat can rock in paddle up position.

Forward Tilt

Lean back in chair and roll or spin lever forward for forward tilt. Roll or spin lever backward for flat position during rocking. Attention: Lever can only be moved when in a rear rocking position.

Tension Knob

Turn clockwise to increase tension, turn counter-clockwise to decrease tension.

Seat Slider

While seated, lift lever, adjust seat to desired depth and release lever to lock. Locks in 5 positions over 2 inches.

